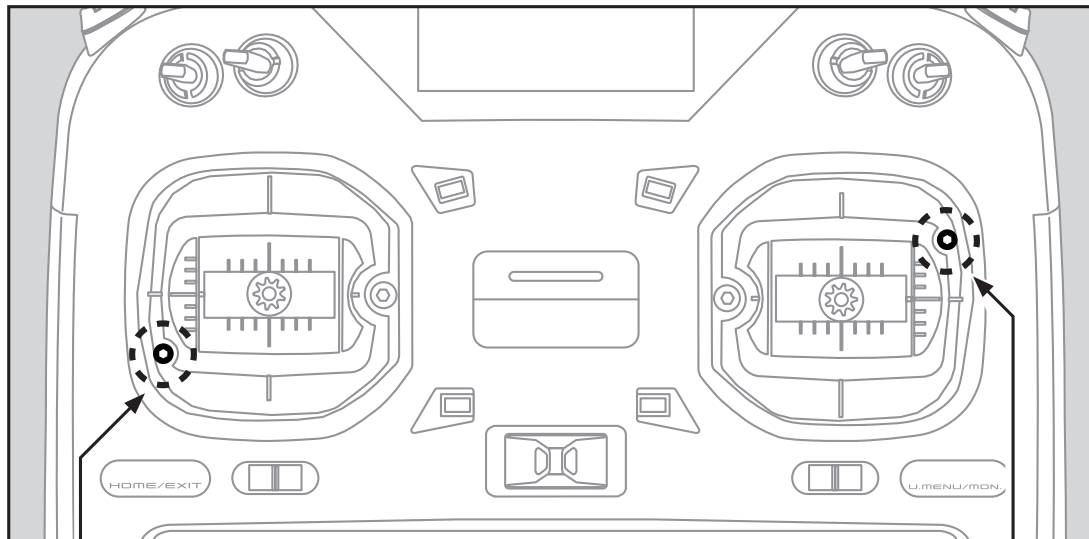




●Hardware Calibration

The spring tension can be released by tightening the screw in the figure below.

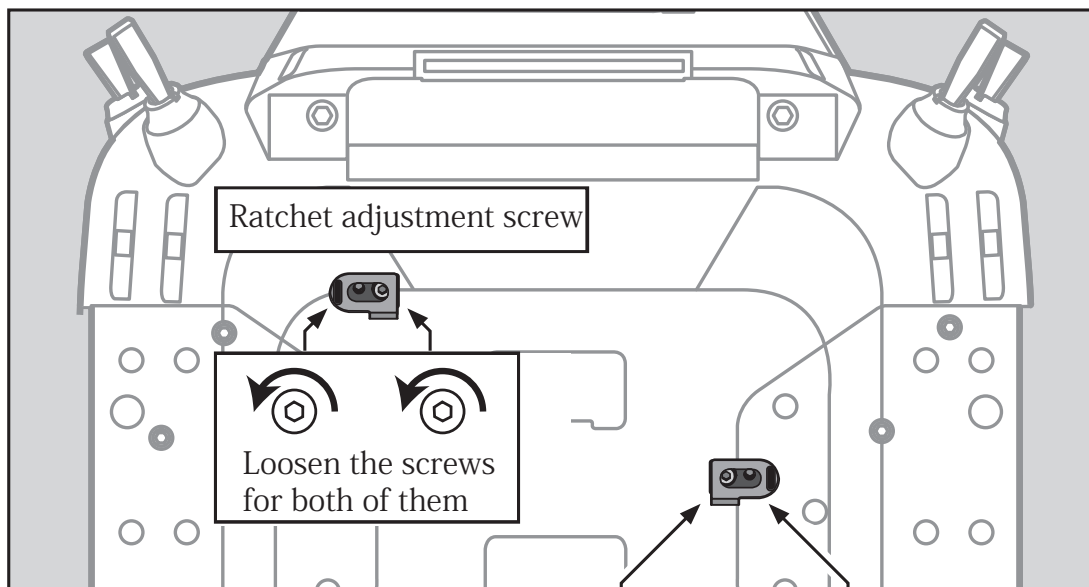
e.g. Stick Mode1 to Stick Mode2





Tighten this screw to release the spring tension.


Loosen this screw and add spring tension.

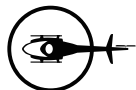

Back Side



Ratchet adjustment screw


Loosen the screws for both of them

 
For airplanes:
Adjust the screw on the left.

 
For helicopters:
Adjust the screw on the right.

●Software Calibration

1. System Menu → H/W Setting → Stick Mode
2. System Menu → H/W Setting → Calibration